

Massage Chair

MODEL ML-FV8-25V1

Welcome to refined comfort. This massage chair is precisely engineered to support the natural movement and balance of the body. Each contour, motion, and function is designed to deliver a seamless full-body experience—quiet, fluid, and deeply restorative.

01 Product Features

Elegant Design & Sustainable Craftsmanship

The chair is defined by refined lines, sophisticated finishes, and an intuitive interface. Thoughtfully crafted using environmentally responsible materials, it reflects a balance of modern design and conscious engineering.

Dual Massage System with Eight Intelligent Massage Heads

Equipped with two independent massage mechanisms and eight precision massage heads, the chair delivers expert kneading and tapping techniques across the neck, back, waist, and hip areas, promoting balanced support and deep muscular relief.

Comprehensive Air Massage System

Approximately twenty airbags gently envelop the legs, arms, and shoulders, providing a smooth, rhythmic air-pressure massage that stimulates circulation and eases accumulated tension.

Customizable Massage Techniques

Massage functions for the neck, back, waist, and hip areas may be individually adjusted. A selection of multiple massage programs and five intensity levels allows for a personalized experience tailored to individual preference.

Precision Intensity & Airbag Control

One-touch controls enable independent activation of air massage functions, with fine adjustment of shoulder, arm, and leg intensity across six levels to achieve optimal balance and comfort.

Ergonomic Zero-Gravity Decline

The backrest reclines between 115° and 155°, positioning the body in a near weightless “zero-gravity” posture that reduces spinal pressure and enhances overall relaxation.

Soothing Heat Therapy

Gentle heat is delivered to the waist and leg areas, maintaining a consistent temperature range of 35°C – 45°C to relieve muscle stiffness and support healthy blood circulation.

Adjustable Massage Duration

Massage sessions may be set in five-minute increments, ranging from a brief five-minute refresh to an extended thirty-minute relaxation session.

SL-Type Extended Guide Rail


An ergonomically designed SL-type guide rail supports a smooth, continuous massage path from the neck through the lower body, following the natural curve of the spine.

Immersive Hi-Fi Bluetooth® Audio

Integrated high-fidelity speakers deliver clear, enveloping sound, enhancing relaxation and creating a refined, immersive sensory environment.

02 Component Names

The advanced SL-track allows the dual massage mechanisms to follow the body's natural curvature, delivering synchronized, full-length coverage from the neck through the thighs for a continuous and balanced massage experience.

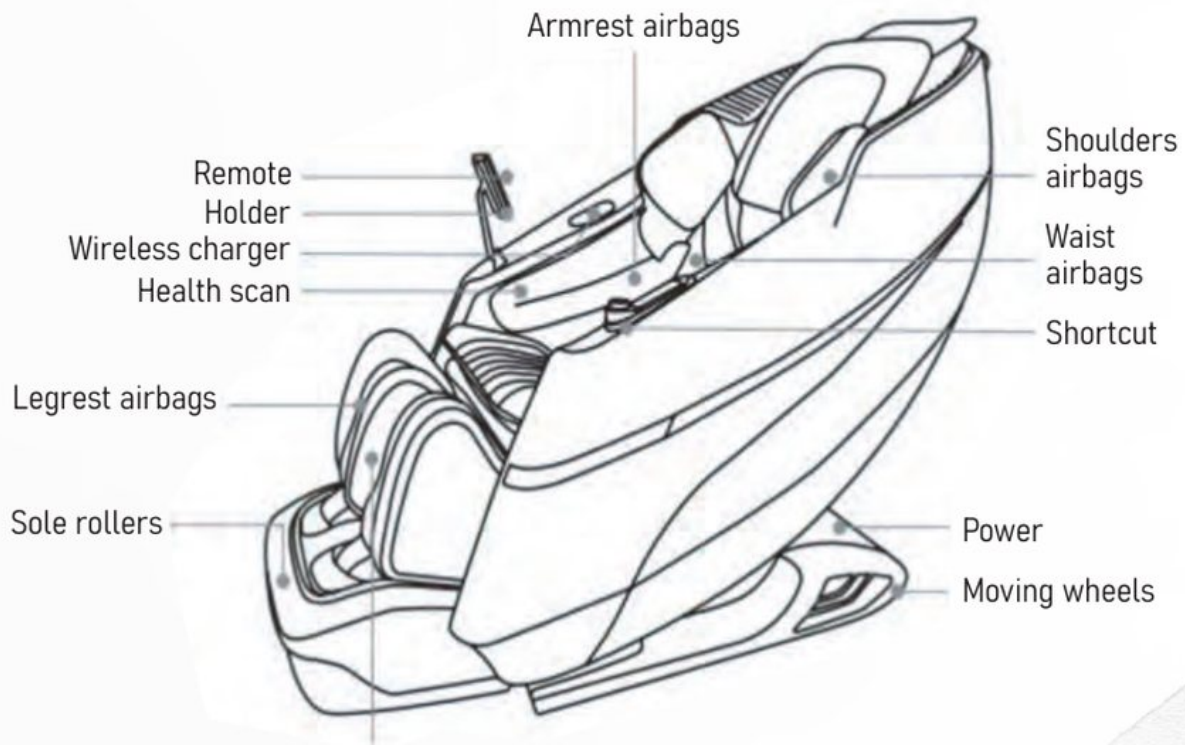

Component locations — shoulder airbags, waist airbags, armrest airbags, legrest airbags, sole rollers, remote holder, wireless charger, health-scan sensor, shortcut panel, power switch and moving wheels.

Location	Component
Upper body	Shoulder airbags, armrest airbags, waist airbags
Lower body	Legrest airbags, sole rollers
Controls	Remote holder, shortcut panel, power switch
Convenience	Wireless charger, health-scan sensor, moving wheels

03 How to Use

3.1 Installing the Power Cord

1

Locate the power inlet

Find the power inlet on the rear of the massage chair.

2

Insert the plug

Firmly insert the power cord plug into the power inlet.

3

Connect to the outlet

Connect the opposite end of the power cord to a standard electrical outlet.

Power supply

AC 110V only. Using a power supply that does not meet the specified voltage voids warranty coverage.

3.2 Moving the Massage Chair

1

Empty and power off

Ensure the chair is unoccupied and powered off.

2

Press the backrest

Stand behind the chair and press down firmly on the backrest.

3


Tilt about 40°

Tilt the chair forward until it rests securely on the moving wheels (approximately 40°).

4

Push forward

Carefully push the chair forward to its new position.

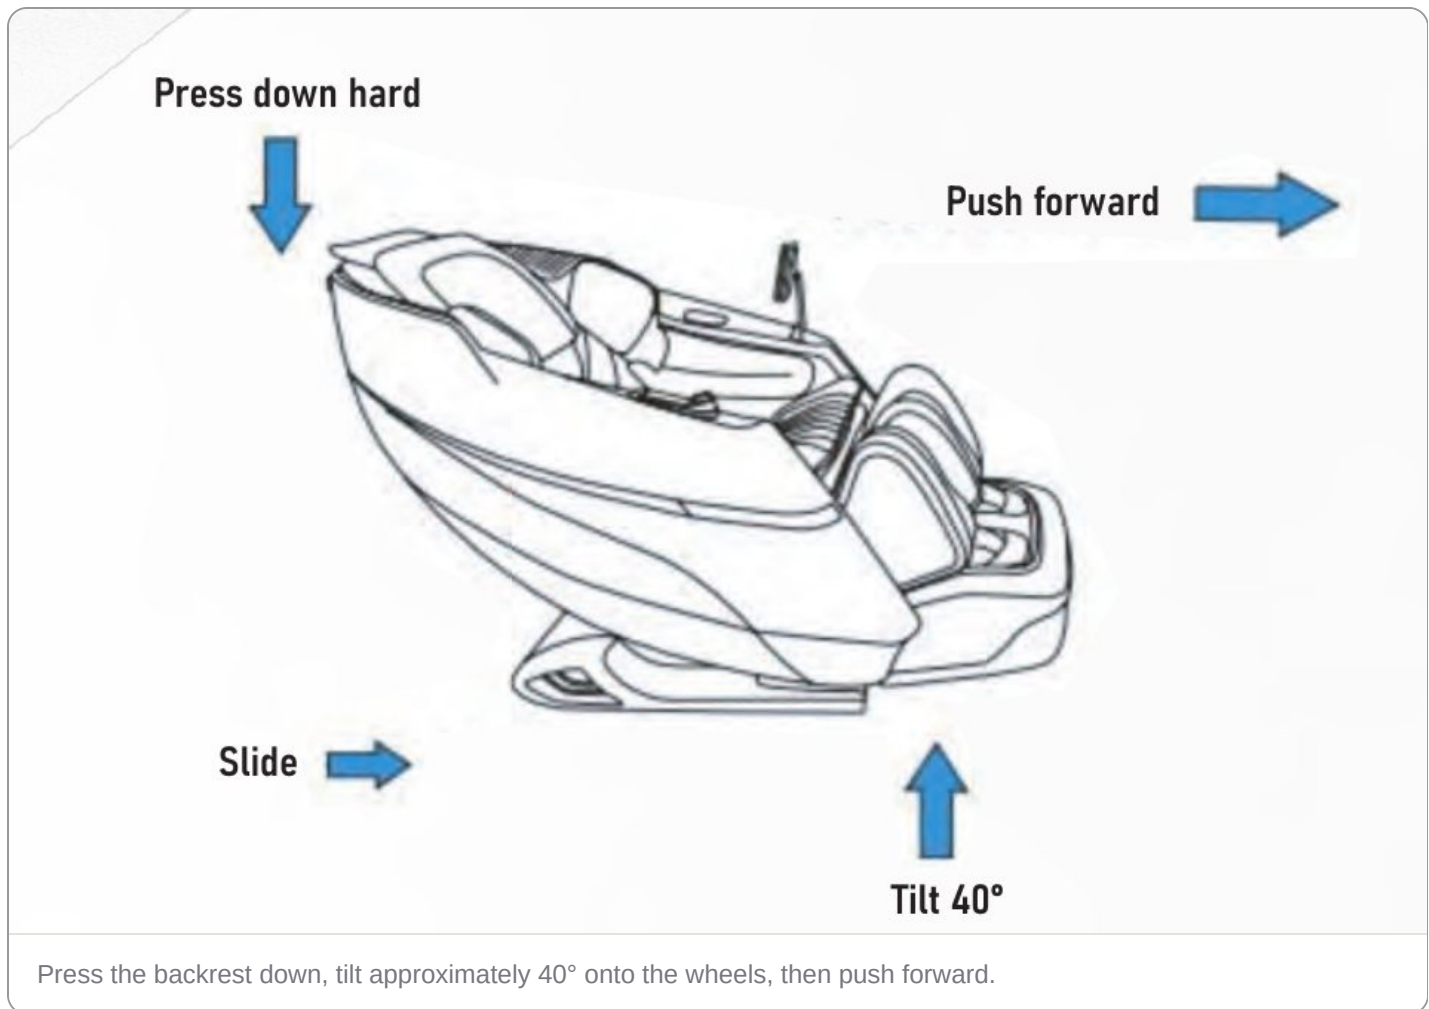

Important

- Do not apply excessive force when tilting the chair, as this may cause instability.
- Never move the chair while it is occupied.
- To protect flooring, place a mat or protective padding beneath the chair, particularly during relocation.

► Video Guides

Short videos covering installation and basic operation. Scanning the QR code on the manual cover brings you straight to this page.

**1. Installing the power cord
(~30 s)**

**2. Moving the chair safely (~40
s)**

**3. Running a health scan (~45
s)**



Cover QR code destination

Point the QR code on the printed cover at this address. Customers who mislay the paper manual land directly on the current manual and video guides.

<https://malangmassagechair.com/manual/ml-fv8-25v1/>

04 Tablet Interface

The tablet interface provides intuitive control over all massage functions. Its streamlined layout allows effortless customization while maintaining a calm and immersive user experience.

4.1 Body Scanning

The chair automatically scans the body to detect key pressure points and alignment, allowing the massage system to adapt precisely to individual body contours for a personalized session.



Body-scan screen — please wait for optimal calibration.

Heating Therapy

Activate or deactivate heat therapy for the waist and leg areas to enhance muscle relaxation and circulation.

Foot Roller Massage

Adjust the intensity of the foot rollers to suit personal comfort and preference.

Leg Kneading

Select and customize leg kneading modes to deliver targeted, rhythmic lower-body relief.




Main control screen — Voice / Auto / Custom / Position / Scan.

4.2 Automatic Massage Programs

Indulge in a curated collection of expertly designed automatic massage programs. Each mode is thoughtfully crafted to support balance, recovery, and deep relaxation—allowing body and mind to return to harmony with a

single touch.

(Program names displayed on the screen may vary by model and software version.)

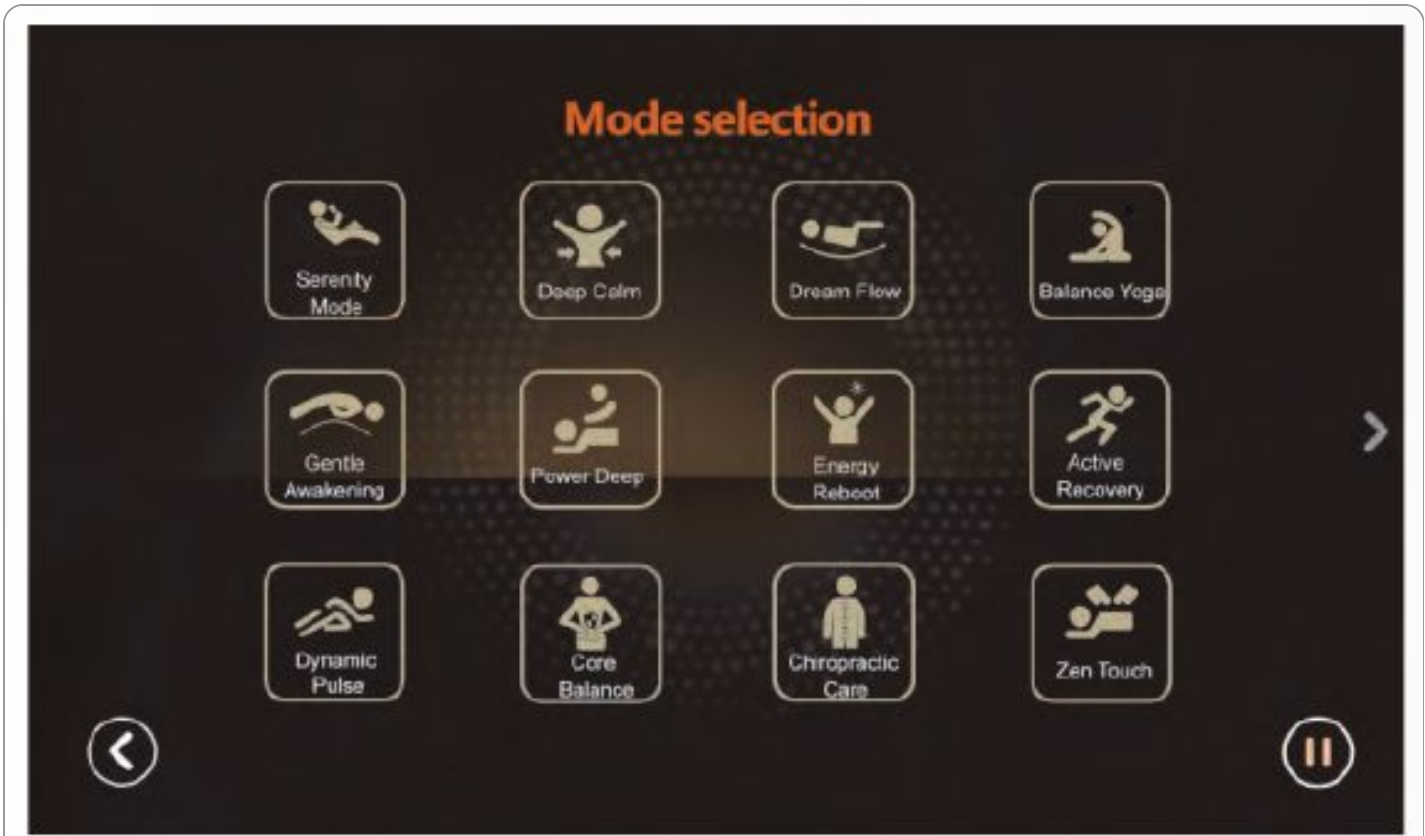

Mode selection screen — twelve automatic programs.

Program	Purpose
Serenity Mode	Immerse yourself in pure tranquility
Deep Calm	Deep, settling calm
Dream Flow	Drift effortlessly into deep rest
Upper Relief	Precise relief for the upper body
Chiropractic Care	Rejuvenating spinal alignment
Gentle Awakening (Stretching)	Full-body stretching to awaken and extend the body
Active Recovery	Revitalize fatigued muscles
Balance Yoga	Reconnect the body's natural rhythm
Tuina Therapy	Traditional healing technique
Air Embrace	Soft embrace of air pressure
Focus Relax	Everyday comfort and unwinding
Easy Watching	Soothing ease for your favorite moments of rest
Power Deep · Energy Reboot · Dynamic Pulse · Core Balance · Zen Touch	Additional programs (availability varies by model)

4.3 Manual Mode

Manual Mode provides precise, hands-on control, allowing you to tailor each massage to your individual preferences.

Massage Techniques (six)

- Kneading
- Rhythmic Tapping
- Kneading & Tapping

- Percussion
- Zen Shiatsu
- Bi-Directional Kneading

Massage Position


- **Focus Massage** — concentrates massage action on a single targeted area.
- **Partial Relax** — targets a specific region between the upper and lower back.

Advanced Adjustments

- **Upper & Lower Body** — control the upper and lower massage mechanisms independently.
- **Massage Width** — select Wide, Middle or Narrow paths (available for flapping and tapping techniques).
- **Mechanism Speed** — adjust the operating speed of both mechanisms.
- **Air Intensity** — control the intensity of air compression during the session.

4.4 Health Scan

The Health Scan feature provides general wellness indicators by measuring heart rate, blood oxygen level, and microcirculation.

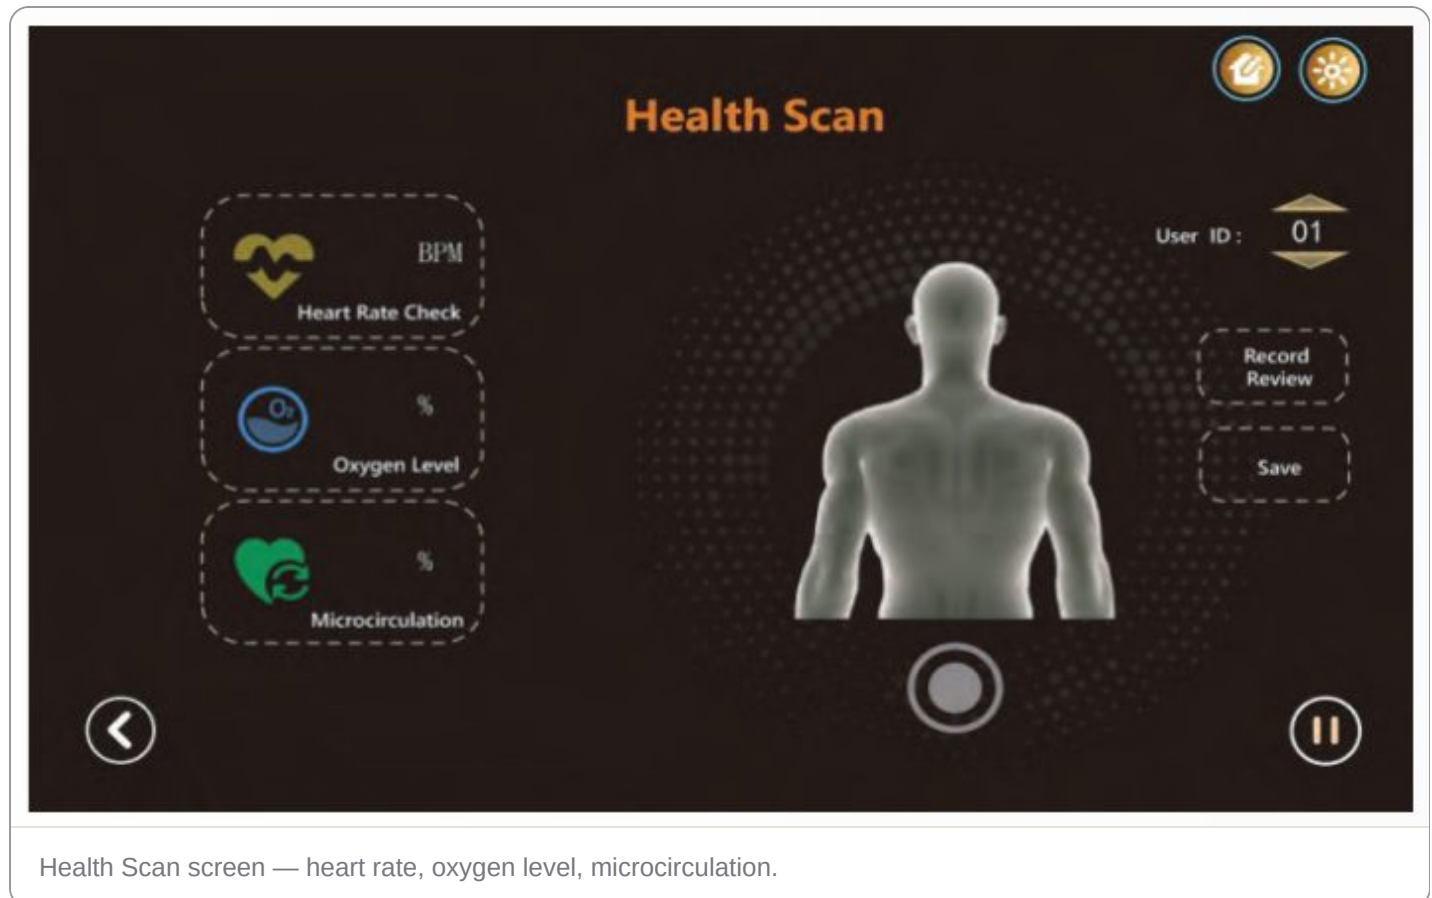

1

Open Health Scan

Access the Health Scan interface from the tablet control.

2

Place your fingertip

Place your fingertip gently on the designated glass sensor.

3

Stay still

Ensure full contact and remain still to avoid interference during measurement.

4

Start collection

Select Start Collection and wait briefly while the scan completes.

5

Read the results

Heart rate (BPM), blood oxygen level and microcirculation results appear on the screen.

Note


The information provided by this feature is intended for reference only and is not designed for medical diagnosis or treatment.

4.5 Adjusting Sitting Position

- **Backrest Adjustment** — press and hold to raise or recline the backrest.
- **Leg Rest Extension** — press and hold to extend or retract the leg rest to suit your height.
- **Leg Rest Lift** — press and hold to raise or lower the entire leg rest.
- **Zero-Gravity Positions** — select from three levels (G1, G2, G3) to reduce spinal pressure.

4.6 Smart Voice Control

Your massage chair is equipped with an integrated voice assistant for hands-free operation.

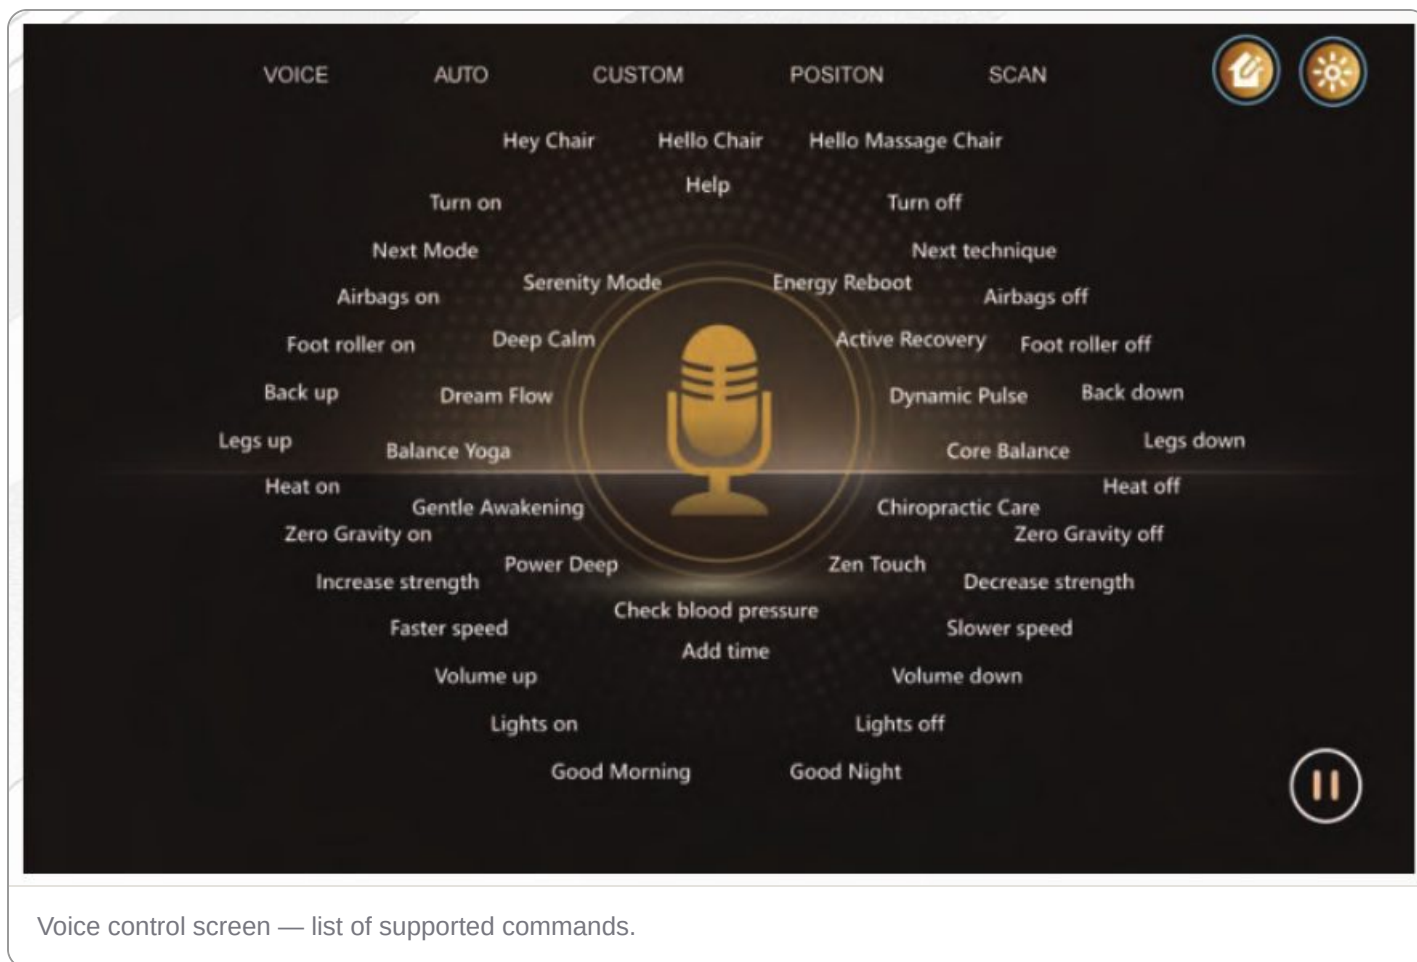

Voice control screen — list of supported commands.

Activating Voice Control

Activate the voice assistant by saying one of the following phrases: “Hey Chair”, “Hello Chair”, “Hello Massage Chair”.

Voice Command Timeout

If no command is detected within 10 seconds after activation, the voice assistant will enter standby mode. To reactivate, repeat one of the activation phrases.

Voice command	Response
Turn on / Turn off	OK, power on / OK, shutting down
Next mode / Next technique	OK, switching mode / OK, switching technique
Serenity Mode · Deep Calm · Dream Flow · Balance Yoga	Starting that mode
Gentle Awakening · Power Deep · Energy Reboot · Active Recovery	Starting that mode
Dynamic Pulse · Core Balance · Chiropractic Care · Zen Touch	Starting that mode
Airbags on / off	OK, airbags on / off
Foot roller on / off	OK, foot roller on / off
Back up / Back down	OK, raising / lowering backrest
Legs up / Legs down	OK, raising / lowering calf
Heat on / Heat off	OK, heating on / off
Zero Gravity on / off	OK, Zero Gravity on / off
Increase strength / Decrease strength	OK, stronger / softer massage
Faster speed / Slower speed	OK, rollers faster / slower
Add time	OK, extended 10 minutes
Volume up / Volume down	OK, volume up / down
Check blood pressure	Measuring blood pressure
Lights on / Lights off	Lights on / Lights off
Help	Lists available commands and switches the tablet to the voice-control page

Voice command	Response
Good Morning / Good Night	Plays a morning or evening greeting

4.7 Settings Menu



Settings screen — brightness, sound, Bluetooth, lighting, voice control, timer, language, font size.

Display & Sound

Screen brightness, button sound volume and Bluetooth® media volume.

Connectivity & Atmosphere

Bluetooth® connection, ambient lighting, and voice control on/off.

Session & Language

Set the timer in five-minute increments from 5 to 30 minutes; choose English, Korean or Spanish for the interface.

4.8 Shortcut Instructions

The shortcut control panel, located on the side of the chair, provides quick and convenient access to frequently used functions.

Button	Function
Power	Press to turn the chair on or off. Rotate the control to adjust massage speed.
Auto	Cycle through the available automatic massage programs.
Heating	Activate or deactivate heat therapy for the waist and leg areas.
Airbag	Activate sequential inflation and deflation for shoulders, arms, legs and feet.
Roller	Turn the foot roller massage on or off.
Backrest Up	Press and hold to raise the backrest to an upright position.
Backrest Down	Press and hold to recline the backrest.

Additional Controls

- **Pause / Resume** — press to pause an active session; press again to resume.
- **Gentle Awakening (Stretching)** — starts a full-body stretching program.
- **More Modes** — access additional massage programs.
- **Preferences** — massage timer, screen brightness, button and media volume, Bluetooth®, ambient lighting, language and voice control.

05 Technical Specifications

Specification	Details
Product Name	MALANG Massage Chair ML-FV8-25V1
Product Type	Dual Roller SL-Track Massage Chair
Rated Voltage	AC 110V
Frequency	60 Hz
Rated Power	150 W
Backrest Recline	115° – 155°
Heat Range	35 °C – 45 °C
Session Duration	5 – 30 minutes, in 5-minute increments
Airbags	Approximately 20
Massage Heads	8 (dual mechanism)
Interface Languages	English · Korean · Spanish

06 Maintenance

Cleaning

Wipe with a soft, dry cloth. If necessary use a mild, neutral detergent. Avoid corrosive, abrasive or solvent-based cleaners, as they may damage the surface.

Power Cord

If the power cord becomes damaged, discontinue use immediately and contact an authorized service provider for replacement.

Electrical Safety

Unplug the chair when not in use and before cleaning or servicing.

Protection

Do not place sharp or heavy objects on the chair, as this may cause permanent damage.

Storage

Store in a dry, well-ventilated environment. Excessive humidity may damage internal components.

07 Safety Precautions

Please read and follow the instructions below to ensure safe operation and long-term performance.

Handling

Avoid applying excessive force or pressure to any part of the chair during use or relocation.

Power Supply

Use only an AC 110V power source.

Unplugging

Always unplug the chair when not in use, before cleaning, or before installing or removing components.

Overheating Prevention

Do not place cushions, blankets or coverings on the chair during operation, as this may restrict ventilation and cause overheating.

Heat Exposure

Keep the power cord away from heating surfaces.

Air Ventilation

Ensure that air outlets remain unobstructed and free from dust, hair or debris.

Foreign Objects

Do not insert any objects into the openings of the chair.

Location

Use indoors only. Do not operate outdoors or where aerosol products or oxygen are in use.

Power-Off Procedure

After turning off all operating controls, unplug the power cord from the wall outlet.

Coverings

Do not cover the massage chair during use or operation.

Environment

Operate in a clean, dry, well-ventilated space. Avoid excessive humidity, dust, direct sunlight or proximity to heat sources.

08 Safety Protections

Supervision

When used by children, elderly individuals, or persons with physical or cognitive limitations, close adult supervision is required.

Authorized Parts

Use only replacement parts and accessories approved by the manufacturer.

Damage or Malfunction

Do not operate the chair if the power cord or plug is damaged, if the chair has been dropped, exposed to water, or is not functioning properly. Contact an authorized service center.

Moving the Chair

Do not drag the chair by the power cord or use the cord as a handle.

09 Important Tips

Jewelry and Clothing

Remove rings, bracelets, necklaces and pins before use. Avoid loose or restrictive clothing that may become caught during operation.

Initial Use

During first use, only the power function is available. Additional functions activate once the chair has fully powered on.

Children and Supervision

Children should use the chair only under adult supervision. Do not allow children to climb, play or stand on the chair.

Massage Intensity

Begin at a low intensity and increase gradually. Pressure should feel relaxing and supportive, never painful.

Health Considerations

Consult a qualified medical professional before use if you have a medical condition. Do not use the chair if you have open wounds, skin conditions, heart disease, high blood pressure or other serious health concerns without medical guidance.

Electrical Safety

Do not use the chair together with other therapeutic electrical devices such as electric blankets. Avoid use within one hour after a full meal.

Pinch Points

Keep hands and body parts away from moving components and areas where compression or pinching may occur.

Flammable Materials

Keep all flammable or combustible materials away from the chair at all times.

Intended Use

This massage chair is designed for personal, in-home use only. It is not intended for commercial, rental or medical applications.

Temperature

If the chair has been stored in a low-temperature environment, allow it to reach room temperature for at least one hour before use.

Massage Duration

The recommended maximum session time is 20 minutes. For safety, the chair automatically stops after extended continuous use.

Heat Function

Use the heat function with caution, especially if you are sensitive to warmth.

Sensitive Areas

Do not apply massage to sensitive areas such as elbows, knees, chest or abdomen. If discomfort occurs, stop use immediately and consult a medical professional.

Power Interruptions

In the event of a power outage, exit the chair carefully. Manual repositioning may be required.

10 Product Warranty

To protect consumer interests, this product is covered by a two-year limited warranty, in accordance with applicable national regulations.

10.1 Complimentary Warranty Service

If a product malfunction occurs due to a manufacturing or material defect within the two-year warranty period, necessary replacement parts will be provided at no charge.

10.2 Warranty Exclusions (Chargeable Service)

The warranty does not cover damage or malfunction resulting from the following conditions. In such cases, service and replacement parts may be provided at the customer's expense:

- Improper use, misuse, or unauthorized self-repair
- Use of a power supply that does not meet specified voltage requirements
- Damage caused by unauthorized relocation, transportation, modification, or installation
- Damage resulting from normal wear, contamination, or lack of routine care
- Damage caused by natural disasters, environmental events, or pest infestation

10.3 Out-of-Warranty Service

Repair services will be provided at full cost under the following circumstances:

- The warranty period has expired
- A valid warranty card cannot be presented or registered

11 After-Sales Service & Warranty Registration

Register your warranty online using the form below. Once registered, your eligibility for complimentary service is on file — no paper card to keep.

Product Name *

MALANG Massage Chair

Product Model *

ML-FV8-25V1

Serial Number

e.g. FV8-2025-000000

Shop of Purchase *

Purchase Date *

mm/dd/yyyy

Customer Name *

Email *

Phone *

Customer Address

Notes

By submitting you agree to your details being processed for warranty-service purposes.

Request Service

The Request Service button opens a mail draft to support@malangmassagechair.com — replace it with your live support address.

Service Record

Repair history is recorded as follows and is reviewed with you by customer support when service is requested.

Date	Repair Details	Replacement Parts	Qty	Technician	Customer Signature

12 Troubleshooting Guide

The full troubleshooting list is below. Tap an item to expand it.

I hear sounds during operation (normal)

Possible causes

- Sound from the massage mechanism during operation
- Airbags inflating and deflating
- Solenoid valve activation
- Air pump operation

Solution

These sounds are a normal part of operation and do not indicate a malfunction. No action is required.

The chair does not operate

Possible cause	Solution
The power plug is not fully inserted	Ensure the power plug is securely connected to both the wall outlet and the chair
The main power switch is turned off	Confirm that the main power switch is turned on
The power button has not been activated	Press the power button on the remote control or shortcut panel

The massage stops during use

Possible causes

- The 20-minute session limit has been reached and the chair has entered standby mode
- The motor has overheated and activated protective shutdown

Solution

- Press the power button to restart the massage session
- Turn off the chair and allow the motor to cool before resuming use

Voice commands are not responding

- The assistant enters standby after 10 seconds with no command — say “Hey Chair” again to reactivate.
- Check that Voice Control is enabled in the Settings menu.
- High ambient noise can reduce recognition accuracy.

The heat function does not feel warm

- Heat operates in the 35–45 °C range and takes a few minutes to reach temperature.
- Heating applies to the waist and leg areas only.
- Confirm heating is switched on in Settings or on the shortcut panel.

Bluetooth® audio will not connect

- Confirm Bluetooth® is enabled in the Settings menu.
- Remove the existing pairing on your phone, then pair again.
- Check that Media Volume is not set to zero.

Health Scan does not display a result

- Your fingertip must be in full contact with the glass sensor.
- Remain still throughout the measurement.
- This feature is for reference only and is not a medical diagnostic tool.

Important Notes

- The manufacturer reserves the right to improve the product and this manual without prior notice.
- Product appearance may vary slightly from the images shown in this manual.
- While this manual has been carefully reviewed, minor printing or interpretation errors may occur.
- Please dispose of this product in accordance with local environmental regulations.

MALANG

[MalangMassageChair.com](https://malangmassagechair.com) (<https://malangmassagechair.com>)

Customer support — video guides and the latest manual

ML-FV8-25V1 · Rev. FV8-20250216-R

© 2026 MALANG. All Rights Reserved.